

# TIRE KIT

**PLEASE READ THESE INSTRUCTIONS CAREFULLY!**

**EXAMINE CONTENTS CAREFULLY FOR ALL PARTS BEFORE ASSEMBLY**

ASSEMBLY

**1** Tire Rack

Hooks on legs of tire rack go into the four rectangular holes in basic trailer. Place two legs on one side in first, then squeeze the other two legs together so that other side will match up with holes and snap in, as shown in Fig. 1.

**2** Mud Flaps

Press slots in mud flaps over tabs on bumper of basic trailer. Push firmly on, as shown in Fig. 2

Spare Wheel with Tire

**3** Front wheels only on tractor may be changed. Place jack under bumper near wheel, and lift truck by turning the large wheel at base of jack or small knob at the top. Unscrew wheel bolt with lug wrench supplied, pull off wheel and replace with spare wheel. Screw wheel bolt back and tighten with the lug wrench. **CAUTION: DO NOT OVERTIGHTEN - USE LIGHT FINGER PRESSURE!**

PART NO.	PART NAME	QUANTITY
1	TIRE RACK	1
2	JACK	1
3	LUG WRENCH	1
4	MUD FLAPS	2
5	SPARE WHEEL WITH TIRE	1

