

CRANE

PLEASE READ THESE INSTRUCTIONS CAREFULLY!

EXAMINE CONTENTS CAREFULLY FOR ALL PARTS BEFORE ASSEMBLY

TELESCOPING CRANE BOOM

To assemble just push crane boom as shown. Be sure locking dimple is on top. Then thread string into "pulley" as shown.


Carefully peel off label and place in location shown.

To mount on basic trailer, remove front stop panel and slip the crane base over the front of the trailer.


Crane may be moved along trailer bed by removing "L" sides.

Crane boom telescopes - just pull in and out. Turn handle to raise and lower hook.

CRANE BOOM
SLIDES INTO PLACE LOCKING DIMPLE

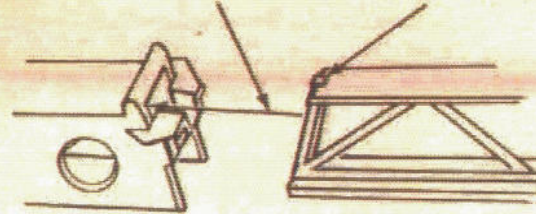

STRING PULLEY

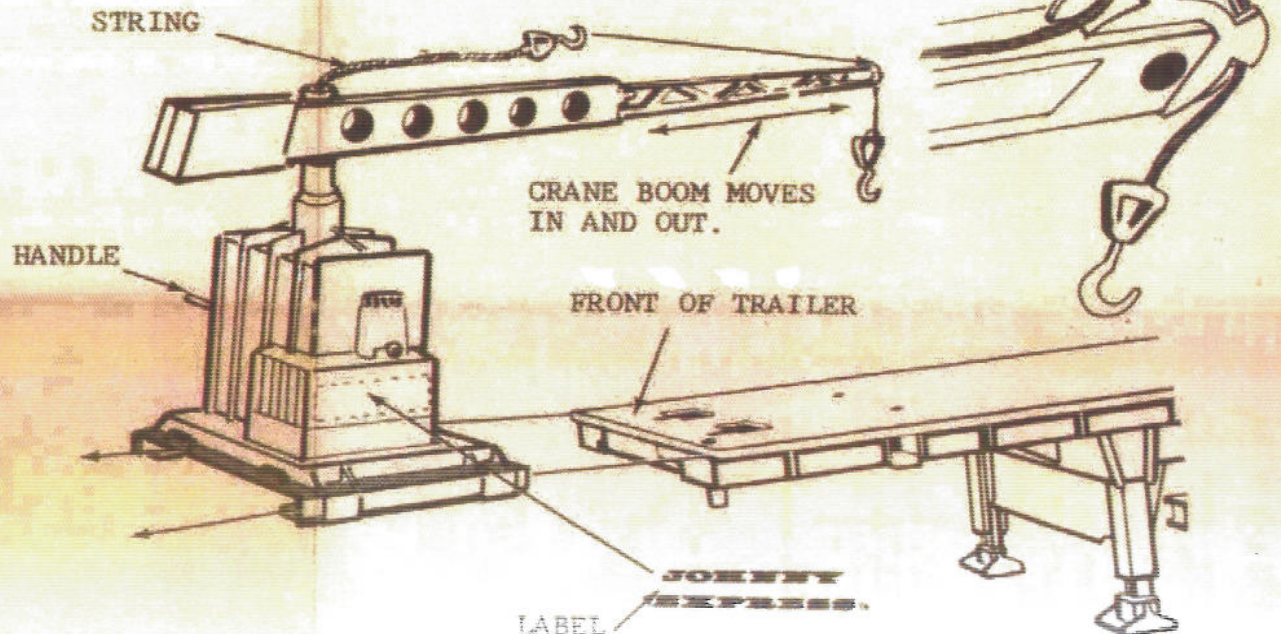

STRING

CRANE BOOM MOVES
IN AND OUT.

HANDLE

FRONT OF TRAILER

LABEL

JOHNNY
EXPRESS